ADJUSTMENT SHEET



VERTICAL ADJUSTMENT

Untighten the blocking screw **A** in all the hinges on the door leaf

Rotate the eccentric B

Tighten the blocking screw A in all the hinges (max 4 Nm)





HORIZONTAL ADJUSTMENT

Rotate screws C

Note: do the same rotation with both screws





DEPTH ADJUSTMENT

Rotate the eccentrics **D**.

Note: do the same rotation with both eccentrics

